INSTALLATION INSTRUCTIONS

<u>bimed</u>

VENTILATION PLUGS, POLYAMIDE



• M12x1.5



• M40x1.5

•	
bi	med

VENTILATION PLUGS, METAL






• M12x1.5 • PG 7 • M40x1.5

Metric Threads		
Thread	Hole Diameter (min max. mm)	
M12 x 1.5	Ø12,0 - 12,2	
M40 x 1.5	Ø40,0 - 40,2	

Metric Threads		
Thread	Hole Diameter (min max. mm)	
M12 x 1.5	Ø12,0 - 12,2	
M40 x 1.5	Ø40,0 - 40,2	

PG Threads		
Thread	Hole Diameter (min max. mm)	
PG 7	Ø12,5 - 12,7	

INSTALLATION INSTRUCTIONS

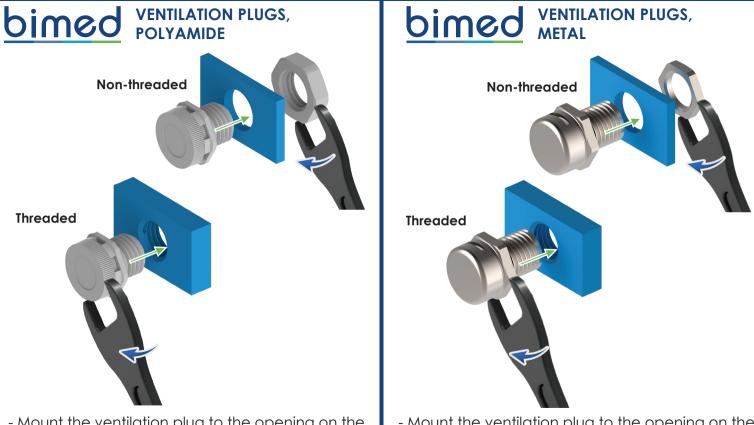

- Mount the ventilation plug to the opening on the enclosure.

- Tighten the ventilation plug by using a screw tool. Use the locknut to tighten if the enclosure is non-threaded. - Mount the ventilation plug to the opening on the enclosure.

- Tighten the ventilation plug by using a screw tool. Use the locknut to tighten if the enclosure is non-threaded.